

4-BUTTON KEYFOB REMOTE

INSTALLATION INSTRUCTIONS

The 4-Button Keyfob Remote (2GIG-KEY3-433) is a wireless, battery-powered key fob that pairs with the control panel. It lets you arm and disarm your security system. The key fob's compact design fits on a key chain and also includes a convenient wall/belt clip bracket. It communicates wirelessly with the control panel via the 433 MHz frequency. It also provides convenient options for the following system operations:


- Arm the system for stay or away mode (doors, windows, and motion sensors)
- Arm the system with no entry delay (requires additional programming)
- Disarm the system (requires additional programming)
- Trigger panic alarms (requires additional programming)
- Turn system-controlled lights ON or OFF and use other applicable open collector output functions
- Automatically turn ON the siren to call the central station in an emergency (if applicable)

Contents

Verify that the package includes the following:

- 1—4-Button Keyfob Remote
- 2—Lithium Coin Batteries (installed)
- 1—Plastic Wall/Belt Clip Bracket
- 1—Plastic Belt Clip

Figure 1 4-Button Keyfob Remote

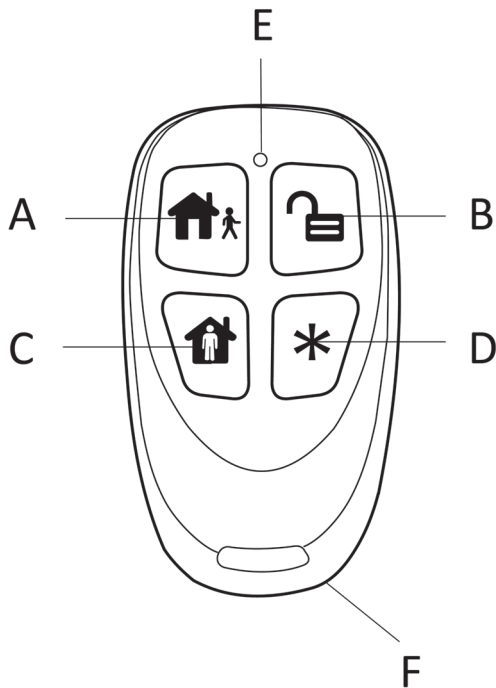

- A Armed Away button
- B Disarm button
- C Arm Stay button
- D Auxiliary button
- E LED indicator
- F Slot (insert and twist coin to open)

Inserting and Replacing the Batteries

The key fob arrives ready to use (batteries already installed). To replace the batteries:

- 1 Insert a coin in the slot at the bottom-right of the key fob.
- 2 Carefully turn the coin 90° to remove cover from the transmitter.
- 3 On the transmitter, use a precision Phillips head screwdriver to remove the small screw from the center of circuit board.
- 4 Carefully lift the circuit board out of the transmitter base.
- 5 Remove both of the old batteries.

IMPORTANT: Always dispose and/or recycle used batteries in accordance with the hazardous waste recovery and recycling regulations for your location. Your city, state, or country may also require you to comply with additional handling, recycling, and disposal requirements.

- 6 Insert the replacement batteries into the transmitter base. The plus (+) sign on the batteries should be facing down and the minus (-) side facing up.
- 7 Replace the printed circuit board (circle side down) and then secure the screw. If the LED lights up RED, the batteries are properly installed.
- 8 Use a top-to-bottom motion to snap the cover of the key fob transmitter over the base.

WARNING: Failure to follow these warnings and instructions can lead to heat generation, rupture, leakage, explosion, fire, or other injury, or damage. Do not insert the battery into the compartment in the wrong direction. Always replace the battery with the same or equivalent type (see *Specifications*). Never recharge or disassemble the battery. Never place the battery in fire or water. Always keep batteries away from small children. If batteries are swallowed, promptly see a doctor.

NOTE: To learn how to program a wireless sensor into the Control Panel, see the Control Panel's *Installation & Programming Guide*.

SPECIFICATIONS

Wireless Signal Range	350 ft (106.7 m), open air, with Wireless Control Panel
Code Outputs	Arm; Disarm; Panic; Relay Control
Transmitter Frequency	433.92 MHz (crystal controlled)
Unique ID Codes	Over one (1) million different code combinations
Supervisory Interval	70 minutes
Dimensions (L x W x H)	1.23 x 2.26 x 0.45 in. (3.12 x 5.74 x 1.14 cm) typical
Weight (including battery)	0.65 oz. (18.4 g)
Housing Material	ABS Plastic
Color	Black
Operating Temperature	32°-120° F (0°-49° C)
Relative Humidity	5-90% Non-Condensing
Battery (installed)	Two (2) CR 2025 3V or equivalent Lithium coin batteries
Certification	CE and RCM

REGULATORY INFORMATION



LIMITED WARRANTY

This Linear product is warranted against defects in material and workmanship for two (2) years. This warranty extends only to wholesale customers who buy direct from Linear LLC or through Linear LLC's normal distribution channels. Linear LLC does not warrant this product to consumers. Consumers should inquire from their selling dealer as to the nature of the dealer's warranty, if any.

There are no obligations or liabilities on the part of Linear LLC for consequential damages arising out of or in connection with use or performance of this product or other indirect damages with respect to loss of property, revenue, or profit, or cost of removal, installation, or reinstallation. All implied warranties for functionality, are valid only until the warranty expires. This Linear LLC Warranty is in lieu of all other warranties expressed or implied.

2GIG by Linear

1950 Camino Vida Roble, Suite 150
Carlsbad, CA 92008 USA



For technical support in the USA and Canada:

855-2GIG-TECH (855-244-4832)

Email: 2gigtechsupport@linearcorp.com

Visit website for technical support hours of operation

For technical support outside of the USA and Canada:

Contact your regional distributor

Visit dealer.2gig.com for a list of distributors in your region

77-000017-001 Rev. B